


TILED ROOF TUBELITE

Tools/Equipment required: •Drill •Screwdriver •Hammer/Nails •Handsaw •Stanley Knife •Grinder.

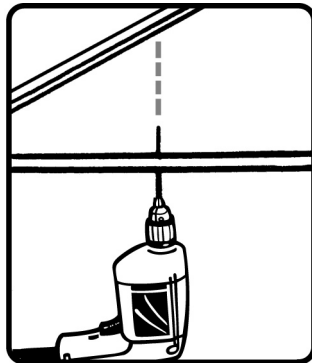

STEP ONE

Locate your desired area of installation within the room required. By climbing into your roof cavity, make sure there are no obstructions within the installation area (large beams, electrical cables etc). Proceed to locate a centre point for your installation. Once located, drill a small

hole through your ceiling this will become your centre point for your installation. If you cannot climb inside your roof you may need to remove some roof tiles to locate your centre point.

We recommend installing your Tubelite where there are no obstacles, however, if you need to remove a batten or a rafter, always replace the structure where necessary. If any electrical or plumbing needs to be relocated always use a qualified licensed tradesperson.

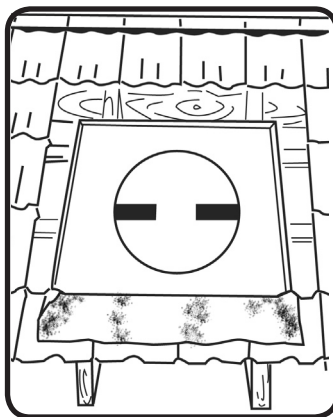



FIG 3.

Fig 3.

This is essential as it gives the correct elevation for the lead flashing to rest wholly on the next row of tiles (FIG 3).

STEP TWO

To flash the tile Tubelite, remove the tiles installed and stack them away from the immediate work area. To fit the flashing tray, using the base flashing as a template mark and cut out the sarking and tile battens required for the opening. Ensure that the lead flashing starting point lines up with the next row of tiles as indicated.

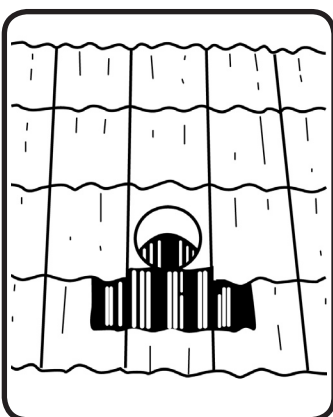

STEP THREE


Once in position, fix the soaker tray to available rafters or battens by nailing through the tabs provided.

STEP FOUR

Climb back onto the roof top and be sure to replace tiles and to slide rear tiles back into position over the metal soaker tray as shown. (Note Cut tiles where necessary around soaker tray) .

STEP FIVE

Peel the protective film from the reflective collar and fit into your flashing tray (if the collar appears loose, bend collar over onto the flashing flange to prevent the collar pulling through). Fit the outer dome to the flashing using fixings and trim provided and tighten trim.

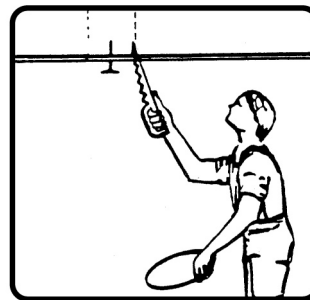


STEP SIX

From inside the room concerned, using your centre hole and the architrave provided as your template, mark your cutout (drop sheets are recommended when cutting). Caution: Before cutting make sure there are

no electrical cables or plumbing. Proceed to cut opening using a handsaw.

STEP SEVEN

From where the Tubelite is to be located on your ceiling, put the diffuser inside the adjacent ceiling area before fitting your architrave.

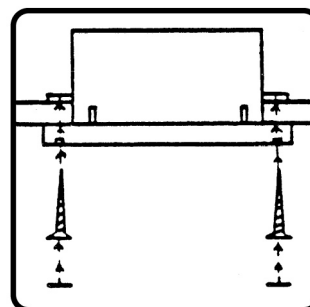

STEP EIGHT

Now fit the architrave by pushing up into the ceiling opening and screw fix with screws and accessories provided. To fit Flexi Shaft, connect the shaft to the roof collar using the 2 hooks provided. (Hook through Flexi Shaft then hook to slots in collar).

Place ceiling diffuser inside Flexi Shaft then connect Flexi Shaft to the ceiling architrave using the 4 U-clips provided. Lower the diffuser down into position on the architrave. If necessary, cut off excess Flexi Shaft as pulling the Shaft tight enhances the Tubelite's performance.

NOTE (1): Although every care has been taken to provide helpful suggested assembly and/or installation advice in the preparation of this brochure Natural Lighting Products Pty Ltd cannot accept any legal liability or responsibility of any kind for any omission, inaccuracy or misinterpretation in the use of the information supplied nor in the negligent use, misuse or abuse of the Tubelite product.